

Insta-TEST[®]
 50 Test Strips
 High Range
Chlorine Dioxide
Just DIP & READ!
 For testing sanitized water
 LaMotte

High Range Chlorine Dioxide ppm


0
10
25
50
100
250
500

Using a cup-size sample, immerse strip for **2 seconds**. Remove strip with **pad face up**. **DO NOT SHAKE OFF EXCESS WATER.**

With pad still facing up, **wait 10 seconds** and read the strip. Discard strip after 30 seconds.

TIPS

- Keep wet fingers out of the bottle.
- Cap bottle tightly after removing strip.
- Store in a cool, dry place.
- At concentrations greater than 500ppm the pad will be a mottled color of golden-brown and black.

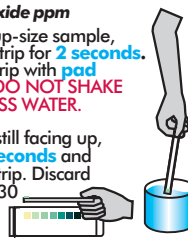

made in USA

Code 3002
 LaMotte
 Chestertown, MD 21620
 www.lamotte.com

