

# Insta-TEST<sup>®</sup>

**PRO** 50 Salt Water Test Strips  
50 Tires para determinar sal en agua  
50 Eau Salée Bandes d'analyse


**Sodium Chloride**  
Range: 1500-5000 ppm

**Cloruro de sodio**  
Altas concentraciones: 1500-5000

**Chlorure de Sodium**  
Variations: 1500-5000 ppm

**LaMotte**

Made in USA  
Code 2998-H

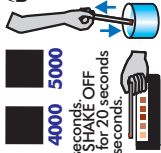

**1500 2000 2500 3000 3500 4000 5000**

Dip pad into sample and immerse for 2 seconds.  
Remove strip with pad face up. DO NOT SHAKE OFF  
EXCESS WATER. In shade, hold pad level for 20 seconds  
and read the strip. Discard strip after 30 seconds.

- Keep out of direct sunlight during testing.
- Store in original container.
- Store indoors in a cool, dry, dark place.

Sumergir la tira en la muestra durante  
2 segundos. Retírela con el lado  
coloreado hacia arriba. NO SACUDA  
EL EXCESO DE AGUA. Mantenga la  
tira horizontal a la sombra por 20  
segundos y lea la lectura. Descarte  
la tira después de 30 segundos.

- No exponga el envase a la luz directa.
- No toque el envase con los dedos húmedos.
- Cierre bien el envase luego de sacar la tira.
- Guarde el envase en un lugar frío, seco y oscuro.

LaMotte Co., Chestertown, MD 21620 USA  
[www.lamotte.com/instab](http://www.lamotte.com/instab)

